

2.0 INSTALLATION

WARNING
DO NOT OPERATE THE FLOWMETER WITHOUT THE OPERATOR PROTECTION SHIELD IN PLACE. TO DO SO MAY RESULT IN OPERATOR INJURY.

The meter may be mounted directly in the pipeline or on the surface of a wall or panel. Whenever making piping connections, support the meter end fittings with a 7/8 inch open-end wrench to prevent damage to the meter assembly.

